



INSTRUCTIONS

'No Drill' Roller Fly Screen for Windows

Additional Instructions: Outward Opening Windows

Product Codes:
03892, 03893



Additional Instructions: Outward Opening Windows

The [video instructions](#) and [written instructions](#) show installation of the screen to an *inward opening* window. The screen is installed in a recess to the exterior of the window and is operated from inside of the window.

If your windows *open outwards*, then you will need to install the screen in the recess to the room-side of the window and operate the screen from inside of the building. The handle which is an integral part of the bottom bar, will also need to face to the inside of the building

There are two options:

Option 1: Rotate the cassette and side channel end caps.

Option 2: Rotate the bottom bar and side channel end caps.

Option 1: Rotate the cassette and side channel end caps.

The cassette will need to be oriented so that the flat side of the cassette faces into the room. The side channel end caps need to be oriented so that the flat side of the end cap faces into the room also.

You will need to leave sufficient space between the screen and the window to tighten and loosen the grip of the cassette end caps and side channel end caps using the allen keys provided.

The allen key holes which allow the grip to be adjusted will be positioned on the window side of the screen - at each end of the cassette, and at the bottom of the side channels.

Option 2: Rotate the bottom bar and side channel end caps.

This option allows the curved side of the cassette to face into the room. The cassette end caps (which grip the recess) can therefore be tightened and loosened easily from the room-side of the screen.

The side channel end caps need to be oriented so that the flat side of the end cap faces into the room.

You will need to leave sufficient space between the screen and the window to tighten and loosen the grip of the side channel end caps using the allen keys provided. The allen key holes for adjusting the grip of the side channels will be positioned on the window side of the screen at the bottom of the side channels.

Instructions to rotate the bottom bar can be found on the following page.

Option 2: Rotate the bottom bar and side channel end caps.

Please read in conjunction with the [written instructions](#), page 11, 14, 15 and 19.

To rotate the bottom bar of your roller fly screen, you will need to follow the steps below.

At step 6 (page 11), before adding the grip locks (parts 10a and 10b), reduce the tension of the cassette spring (see page 19) until the mesh does not retract into the cassette.

Slide the joining strip of the mesh out of the bottom bar.

Rotate the bottom bar so the handle is on the same side as the curved face of the cassette.

Option 2: Rotate the bottom bar and side channel end caps.

Slide the joining strip of the mesh back onto the bottom bar.

Re-tension the cassette spring (see guide on page 19).

Proceed with step 6 (page 11).

At step 9 (page 14), parts 14a and 14b need to be switched.

At step 10 (page 15), the side channels should be orientated so the curved side of parts 14a and 14b are facing towards the window and the flat sides face into the room.